Instructions for the washing machine

A wash cycle costs € 4.00 and results in 200 minutes of electricity running time for the washing machine.

Then fill the washing machine with your laundry and add 1 free detergent pod per wash cycle to the drum together with the laundry.

into the drum with the laundry,

Select the desired wash program and start the machine.

The running time of the program is now displayed. At this time, please add 30 minutes

for the crease protection. However, this can be activated with the "Start / Add laundry" button.

and the wash cycle can be ended and the door opened.

Use of the tumble dryer is free of charge.

Please clean and empty the lint filter after use.

An iron can be borrowed free of charge from reception,

The ironing board can be found next to the washing machine.

We ask that you use the equipment carefully and cleanly.

In the event of a defect or malfunction, please notify reception immediately.